FOOD CONTAINER, MODEL GB-7 COMPACT REPLACEMENT PARTS LIST

Occasionally parts will wear out or become lost. Accordingly, replacement parts are available from the Sint-Plast USA Distributor, K.C. Trading Ltd., Cage Code 1P9K9

Phone:


(540) 720-8400

Fax:

(540) 720-7077

E-mail:


kctrading@aol.com or over our web site at http://www.kctrading.com

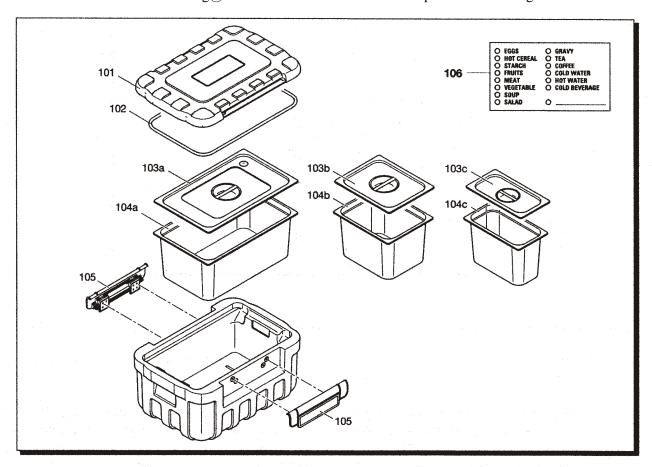

List of Components

FIG-KEY	STOCK NUMBER	ITEM IDENTIFICATION	U/I	QTY
101	296.1244.00	Lid, Outer, NATO-green	EA	1
102	294.5101.20	Gasket, Seal, Outer Lid	EA	1
103a	296.1407.20	Lid GN1/1, Stainless Steel, With Gasket	EA	1
103b	296.1407.22	Lid GN1/2, Stainless Steel, With Gasket	EA	2
103c	296.1407.21	Lid GN1/3, Stainless Steel, With Gasket	EA	3
104a	296,1405.10	Container GN 1/1, Stainless Steel	EA	1
104b	296.1405.12	Container GN 1/2, Stainless Steel	EA	2
104c	296.1405.11	Container GN 1/3, Stainless Steel	EA	3
105	296.3939.01	Clamp, Pullover, black	EA	2
106	294.5203.02	Label, Self Adhesive, Roll, 250 Labels	RO	1
	820.9503.84	Operation Manual GB-7 Compact	EA	1

FOOD CONTAINER, MODEL GB-7 COMPACT **OPERATION MAINTENANCE SHEET**

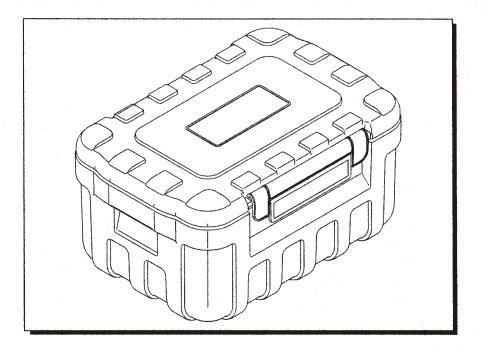

Procedures for Optimum Temperature Holding & Performance

Preheating of the container is unnecessary; however, for optimum performance the following steps are recommended.

- Fill the stainless steel container with hot water (max. 90°C) 30 minutes prior to inserting desired HOT food. For cold food chill the stainless steel container in a refrigerator, freezer, or by filling with chilled water.
- Place the desired food inside the stainless steel liner and fill till the liner is full.
- Secure the inner & outer lid to the container as quickly as possible.
- Using the provided labels, mark the contents of each container.
- Non-prepackaged (processed) food must be stored in Gastronorm-containers with sealed lid.

Care & Cleaning

- Clean the containers (stainless steel and plastic) after each use by using a neutral detergent.
- Remove gasket for cleaning regularly. Clean gasket with a neutral detergent and a thin barrel brush.
- Container may be run through a dishwasher with temperature up to 90°C with no adverse effects to the components. Remove gasket from outer lid before washing in a dishwasher.
- · Allow unit to air dry after cleaning and reassemble unit.

